


# Slalom Coarse Maintenance


Lakes of Katy

May 5, 2007

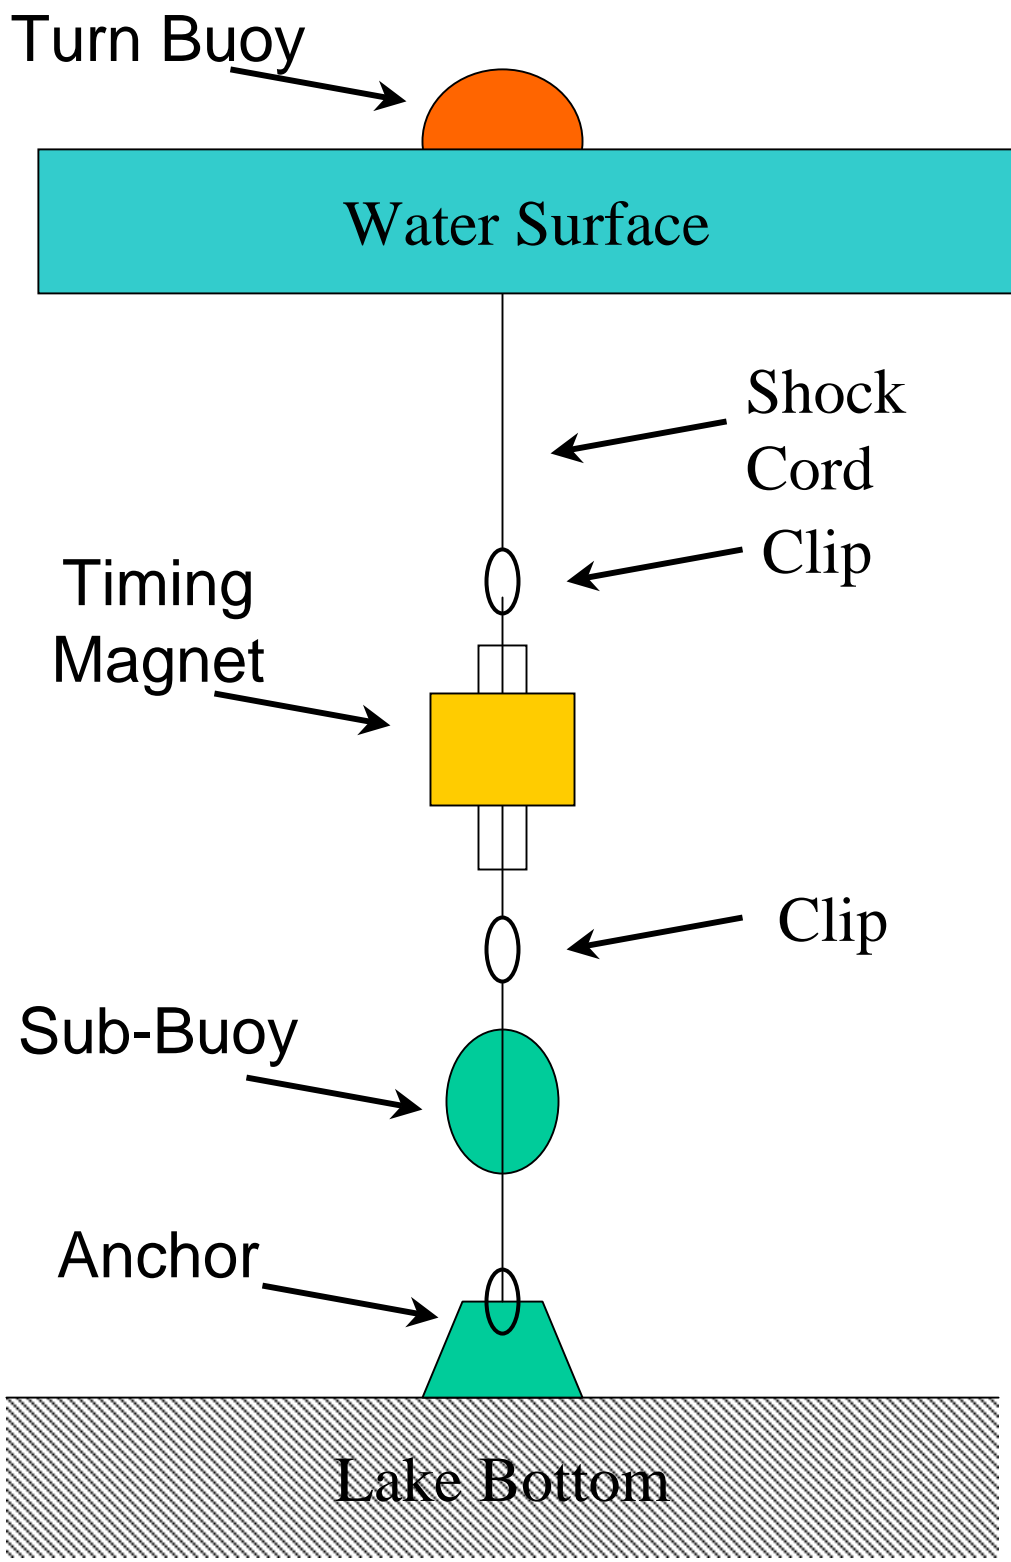




- Feed shock chord through closed eye on hook.
- Pass end through opening in base of hook.

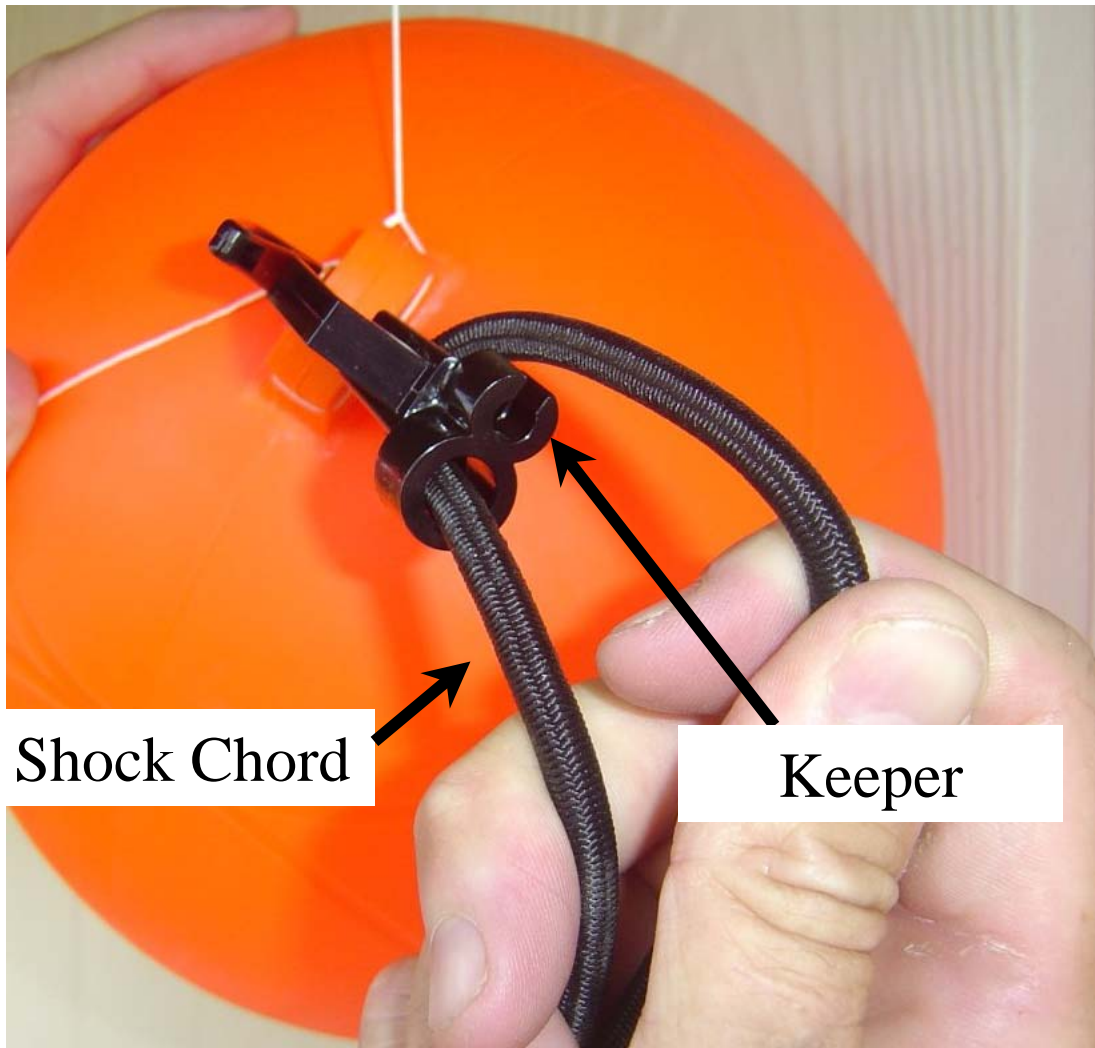

- Adjust chord so ball is  $\frac{1}{2}$  submerged by sliding hook on shock cord to desire length.
- Snap chord into keeper to secure.

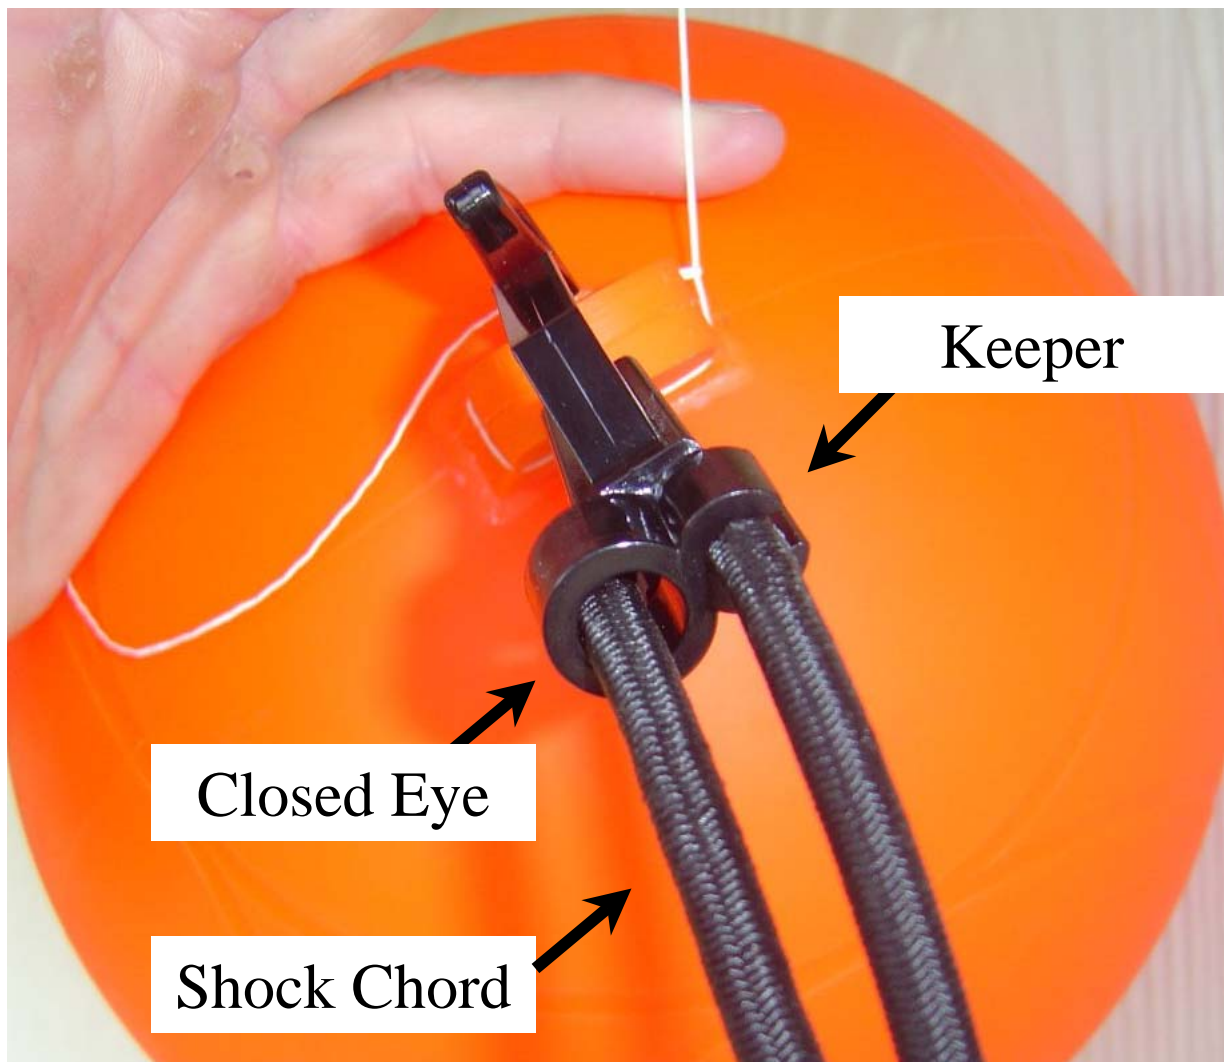

- Chord snapped into hook.
- Adjust depth by snapping shock chord out of keeper and increasing/decreasing length of shock chord.

Turn Buoy




Timing  
Magnet



Hook with  
shock chord  
attached

- Turn buoy with hook and shock chord attached.
- Clip above timing magnet will be just out of photo.

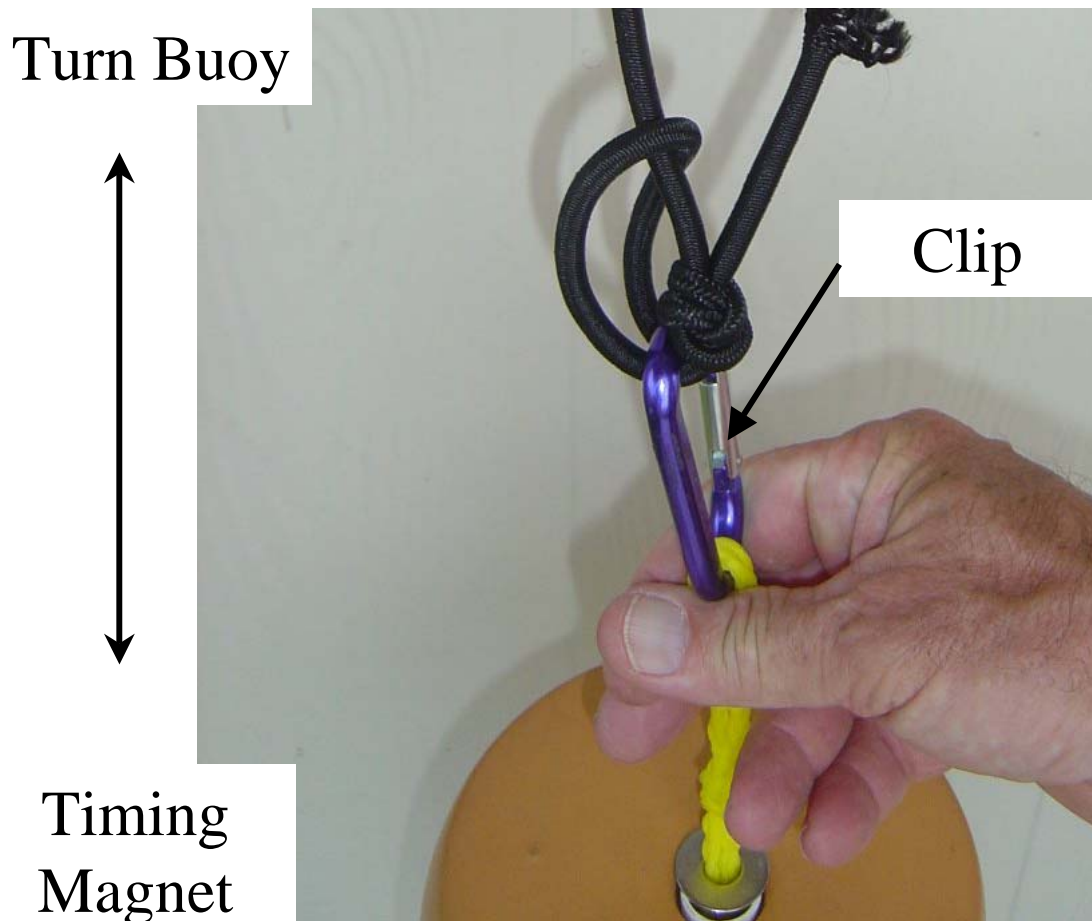


- Tie loop in the end of shock chord.
- Feed shock chord through clip, then through loop.
- Shock chord is now attached to clip.
- Top of timing magnet is pictured below blue clip.

Turn Buoy



Sub-bouy

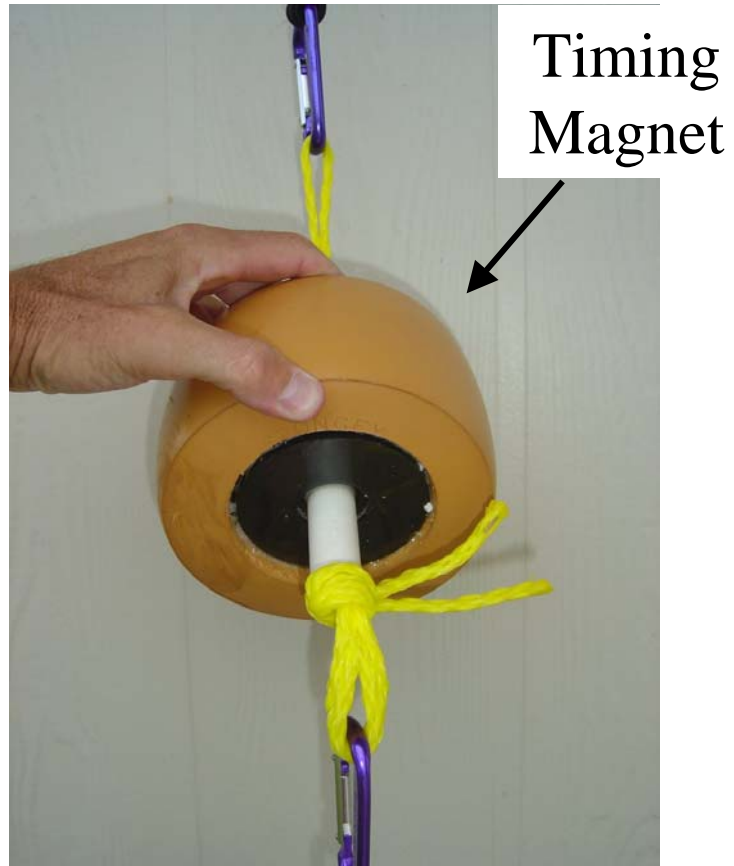

- Timing magnet (Bottom showing)
- Attached to clip on sub-buoy
- Rope through the PVC pipe with loops on each end.
- Clip on top to attach shock chord.